
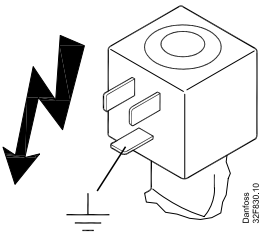


# Installation Guide

## Coils for EVU, EVUL, EVUB and EVUF solenoid valves


### Type AS and AU

032R9517

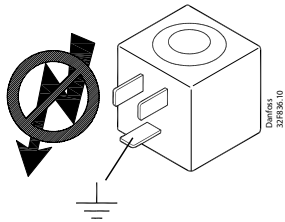


#### Warning

Never switch on power to the coil when it is dismantled from the valve. There is a danger the coil may be damaged and a risk of injuries and burns.

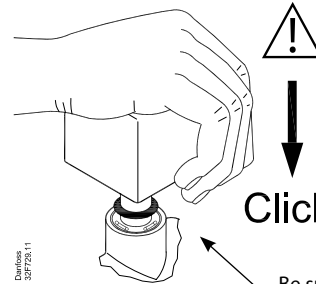

Be sure that the O-ring is in place

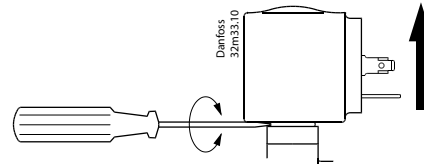


032R9517

# Installation Guide


## Coils for EVU, EVUL, EVUB and EVUF solenoid valves

### Type AS and AU

032R9517

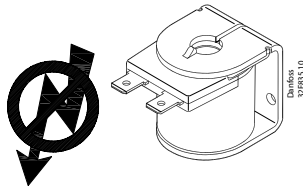

### Installation Guide

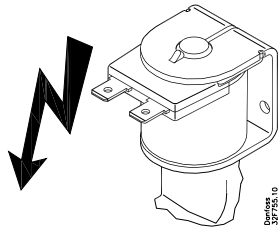


#### Warning

Never switch on power to the coil when it is dismounted from the valve. There is a danger the coil may be damaged and a risk of injuries and burns.



Be sure that there is **no** O-ring!

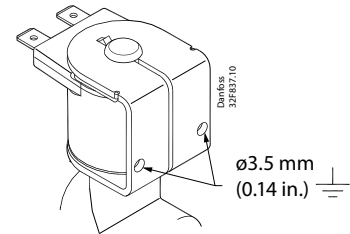

032R9517