



Installation Guide

ABNM A5 LOG/LIN for AB-QM, 0-10 V Proportional

Fits to AB-QM DN 10-32 / 1/2-1 1/4 inch

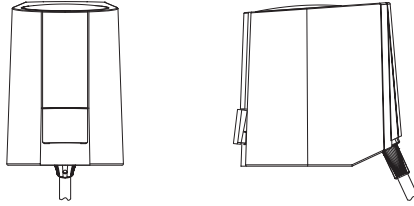


1. Mounting / demounting

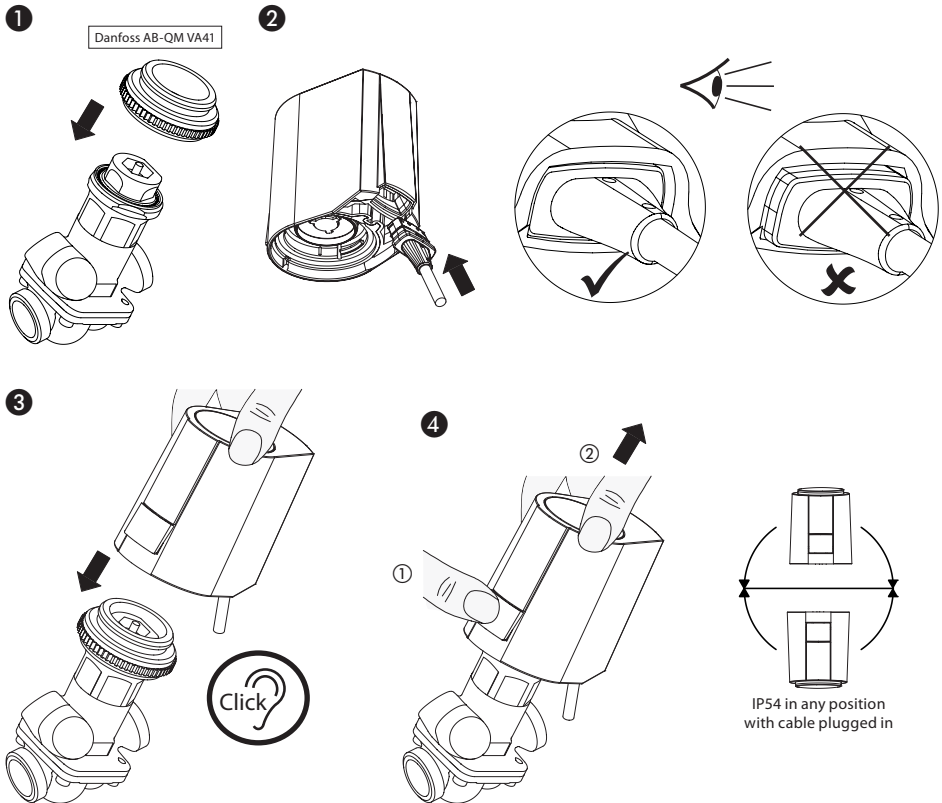


Installation Guide ABNM A5


2. Electrical Connection & Dimensions

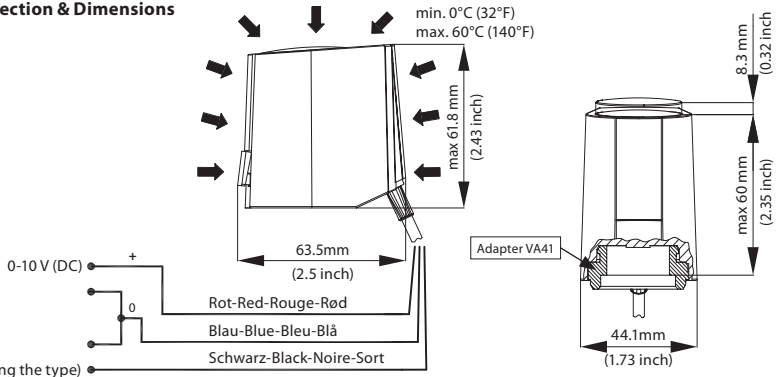

3. Unlock NC version (First Open Function)

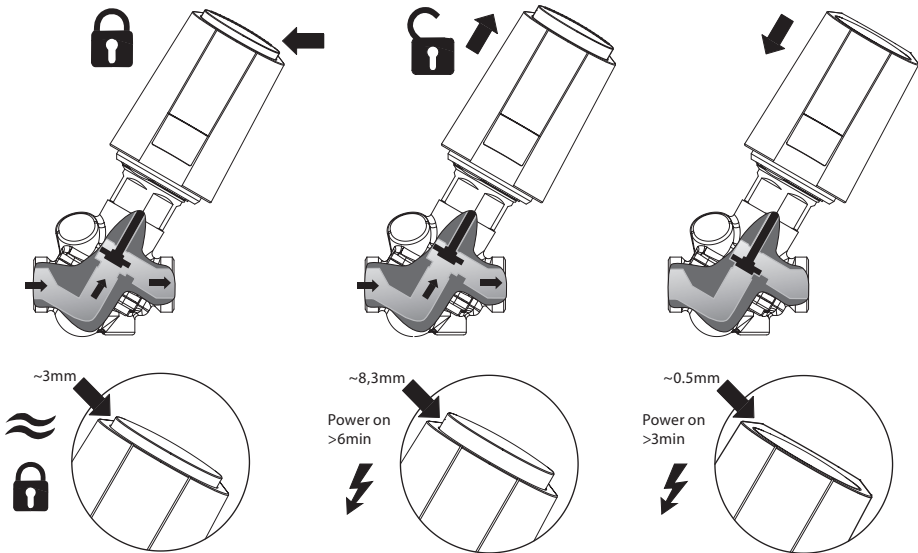

4. NO/NC version

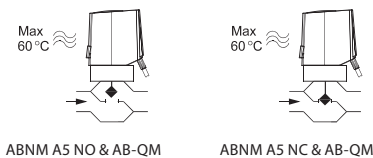

5. Auto Calibration

