

## Installation guide


**Solenoid valve**

Type EV225B




032R9281


032R9281

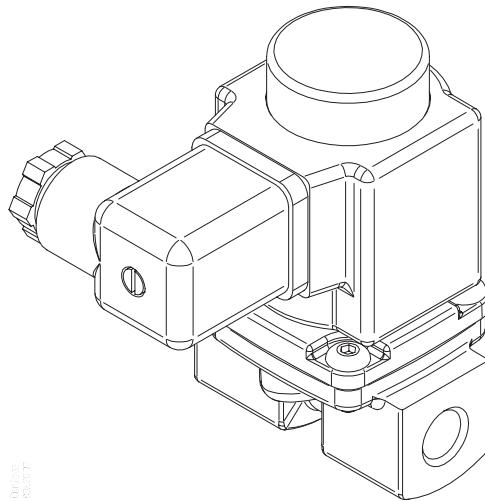


1

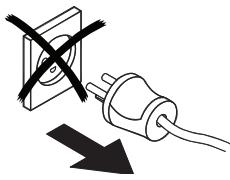


2

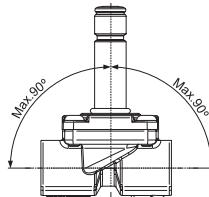


3

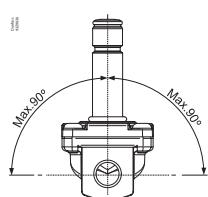


4

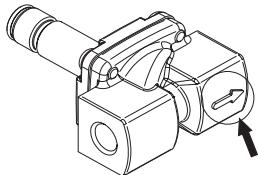

5

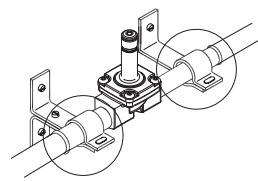


6

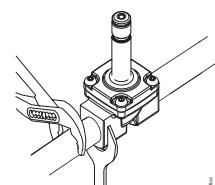


Імпортер: ТОВ з ім. "Данфосс" ТОВ" 04080, Київ 80, г/с 168, Україна

Info for UK customers only: Danfoss Ltd., 22 Wycombe End, HP9 1NB, GB


(7)

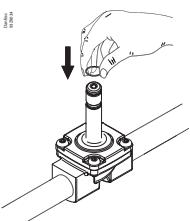


(8)

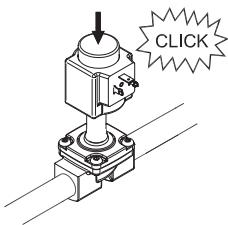


(9)

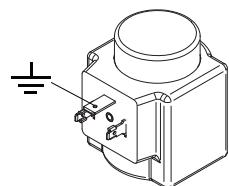


(10)

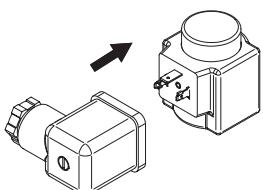


(11)

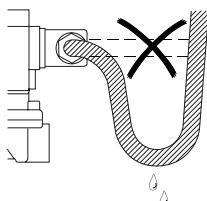

(12)

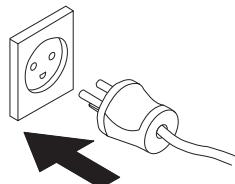

(13)

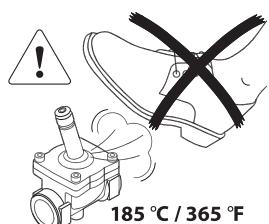

Any information, including, but not limited to information on selection of product, its application or use; product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues, descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.